Radio System

From September 1997

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

Relay location on the thirteenfold auxiliary relay panel, above relay panel:

Relay panel:

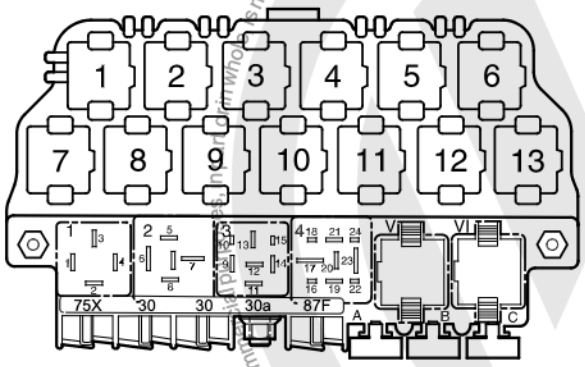

3B–20676

Relay location on the eightfold auxiliary relay panel, behind relay panel:

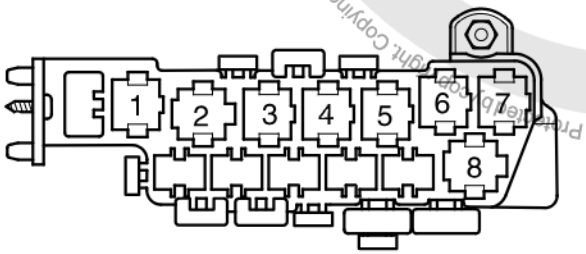

3B–20515

Note:

- *Number in parentheses indicates production control number stamped on relay housing.*

Fuse colors

Protected by copyright. Copying for private or commercial purposes, in any form whatsoever, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

30 A - green
25 A - white
20 A - yellow
15 A - blue
10 A - red
7,5 A - brown
5 A - beige

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

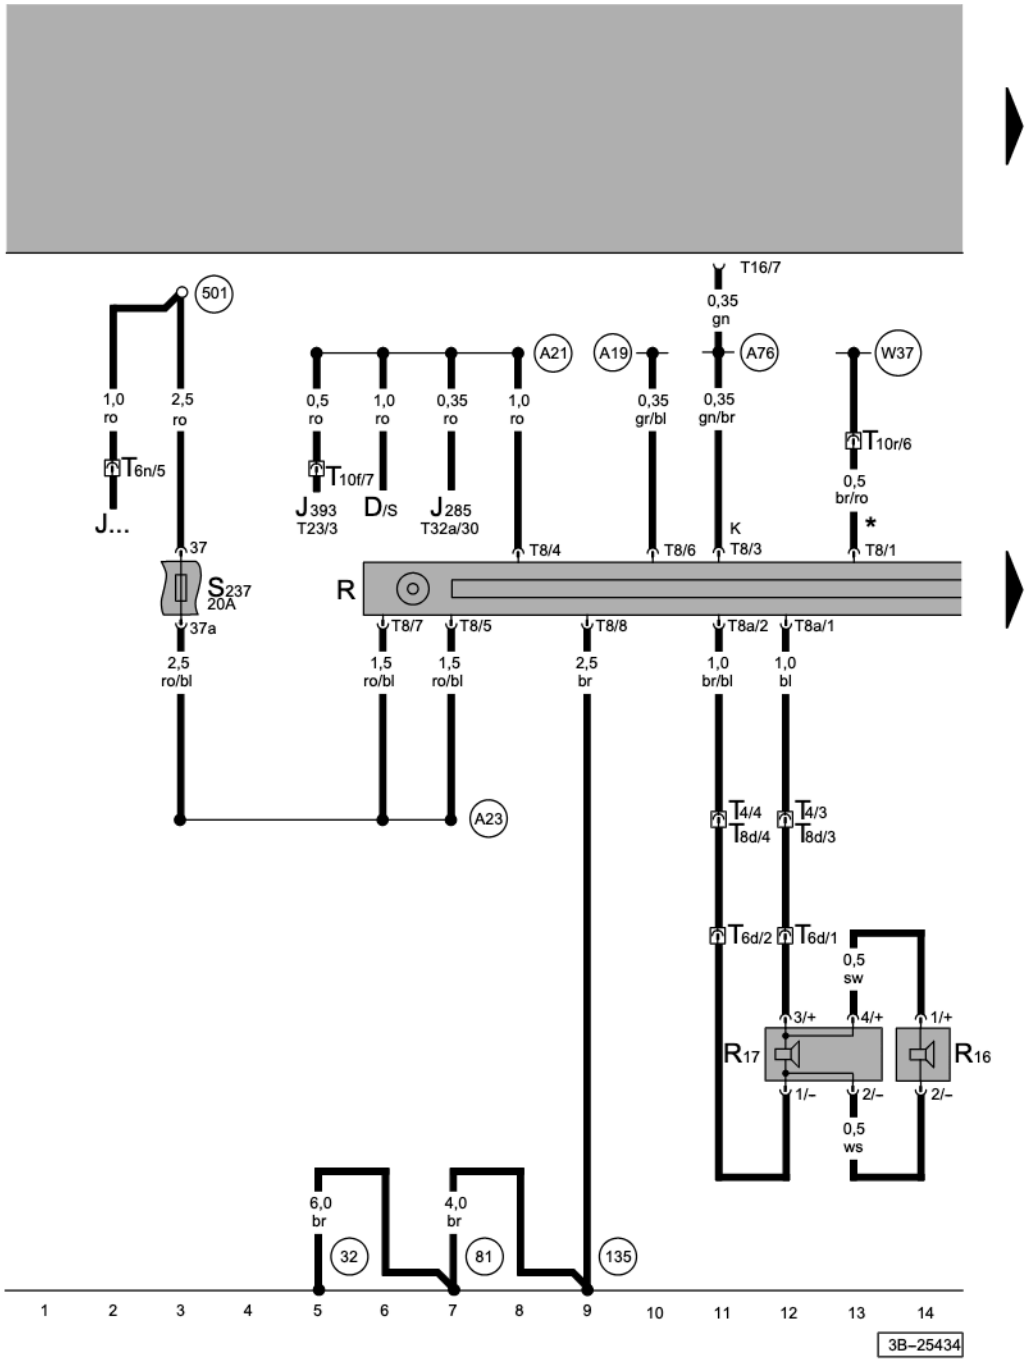

Radio, right rear speakers

J...	Engine Control Module (ECM)
R	Radio
R16	Right Rear Tweeter, in right rear door
R17	Right Rear Woofer, in right rear door
S237	Fuse 37 in fuse holder
T4	4-Pin Connector, black, connector station A-pillar, right
T6d	6-Pin Connector, red, on B-pillar, right
T6n	6-Pin Connector, red, on protective housing for control module
T8	8-Pin Connector, black, on radio
T8a	8-Pin Connector, brown, on radio
T8d	8-Pin Connector, black, connector station A-pillar, right
T10v	10-Pin Connector, violett, connector station A-pillar, right
T16	16-Pin Connector, Data Link Connector (DLC), below instrument panel, left
32	Ground connection, behind instrument panel, left
A76	Connector (K-diagnosis wire), in instrument panel wiring harness
81	Ground connection -1-, in instrument panel wiring harness
135	Ground connection -2-, in instrument panel wiring harness
501	Screw Connection -2- (30), on relay panel
A19	wire connection (58d), in instrument panel wiring harness
A23	wire connection (30al), in instrument panel wiring harness
W37	Connector (alarm system), in wiring harness floor

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Copyright by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG. Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG.

Radio, front speakers, left rear speakers

R	Radio
R14	Left Rear Tweeter, in left rear door
R15	Left Rear Woofer, in left rear door
R20	Left Front Tweeter, in driver's door
R21	Left Front Woofer, in driver's door
R22	Right Front Tweeter, in passenger's door
R23	Right Front Tweeter, in passenger's door
T4	4-Pin Connector, black, connector station A-pillar, right
T4a	4-Pin Connector, black, connector station A-pillar, right
T4b	4-Pin Connector, black, connector station A-pillar, left
T4c	4-Pin Connector, black, connector station A-pillar, left
T6c	6-Pin Connector, red, on B-pillar, left
T8a	8-Pin Connector, brown, on radio
T8c	8-Pin Connector, black, connector station A-pillar, left
T8d	8-Pin Connector, black, connector station A-pillar, right

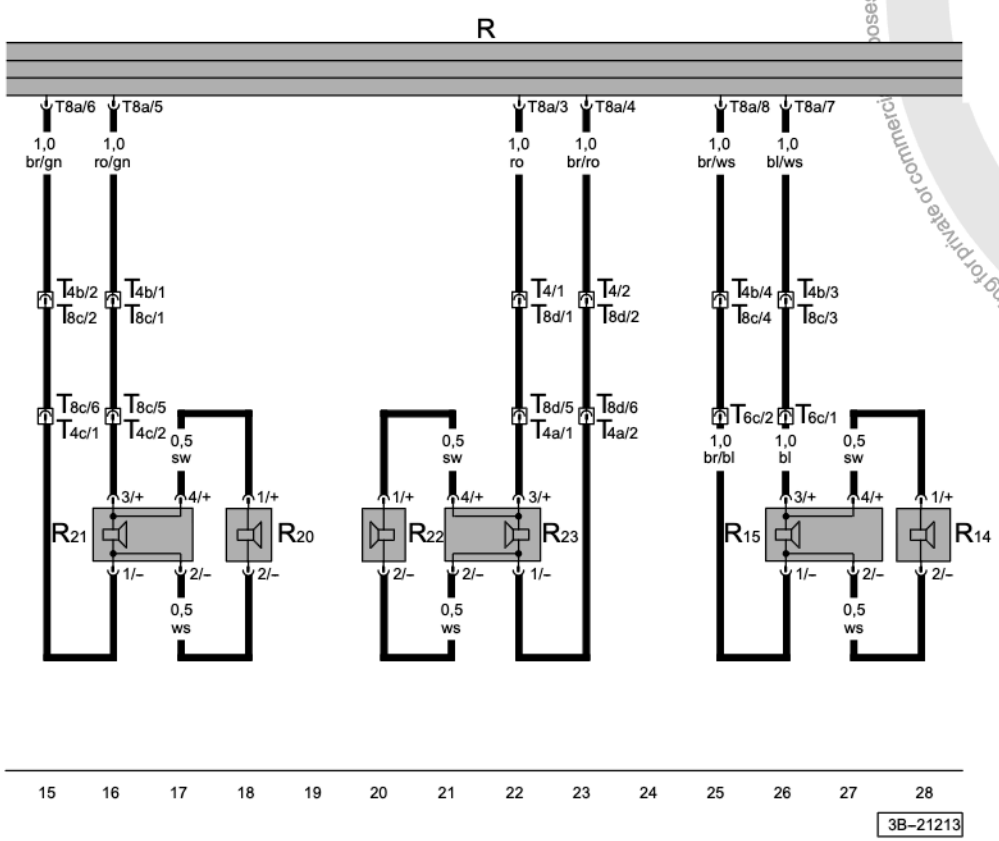

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

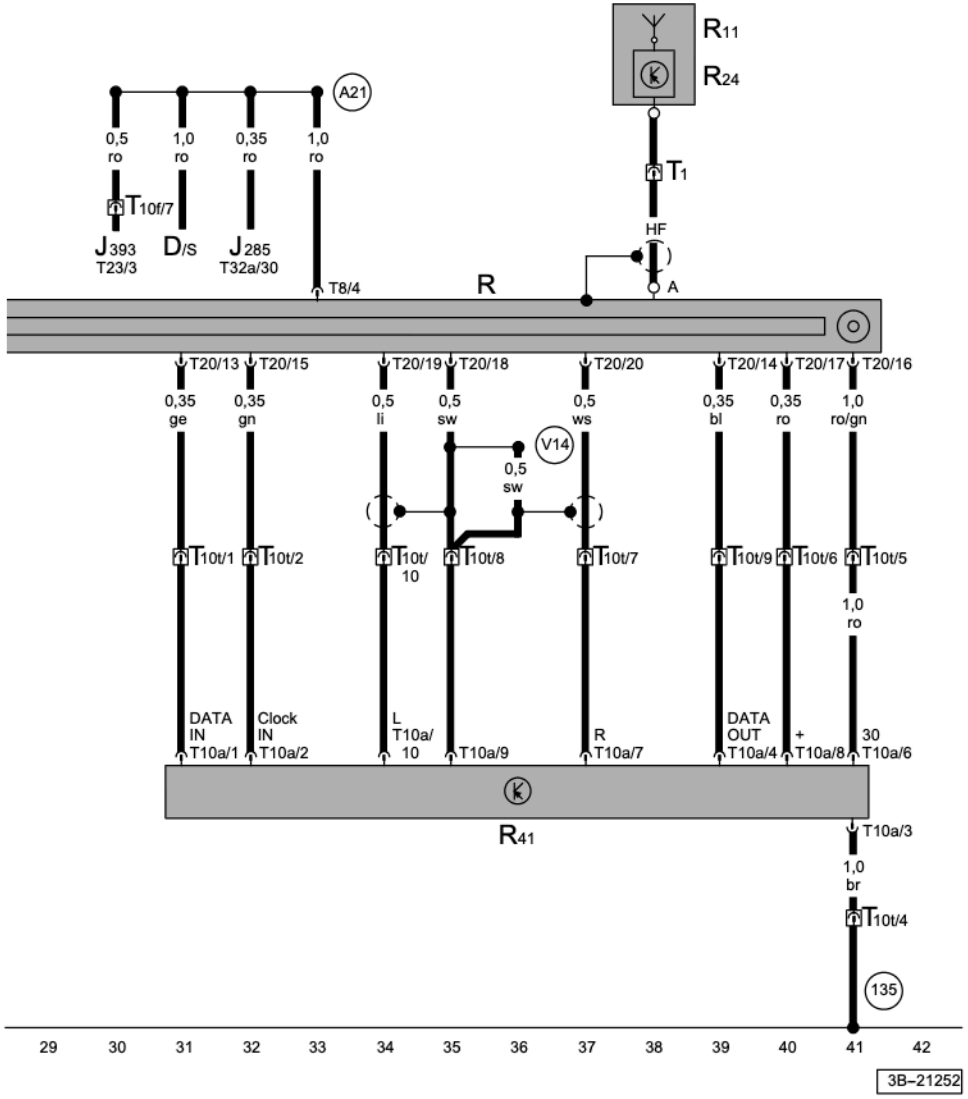

Radio, Antenna, Antenna Amplifier, CD Changer Unit

D	Ignition/Starter Switch
J285	Control module with indicator unit in instrument panel insert
J393	Central control module for comfort system
R	Radio
R11	Antenna
R24	Antenna Amplifier
R41	CD Changer Unit
T1	1-Pin Connector, black, below console
T8	8-Pin Connector, black, on radio
T10a	10-Pin Connector, red, on CD Changer Unit
T10f	10-Pin Connector, blue, connector station A-pillar, left
T10t	10-Pin Connector, red, connector station A-pillar, right
T20	20-Pin Connector, on radio
T23	23-Pin Connector, on central control module for comfort system
T32a	32-Pin Connector, blue, on instrument cluster
135	Ground connection -2-, in instrument panel wiring harness
A21	wire connection (86s), in instrument panel wiring harness
V14	wire connection (shielding), in CD-changer wiring harness

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.